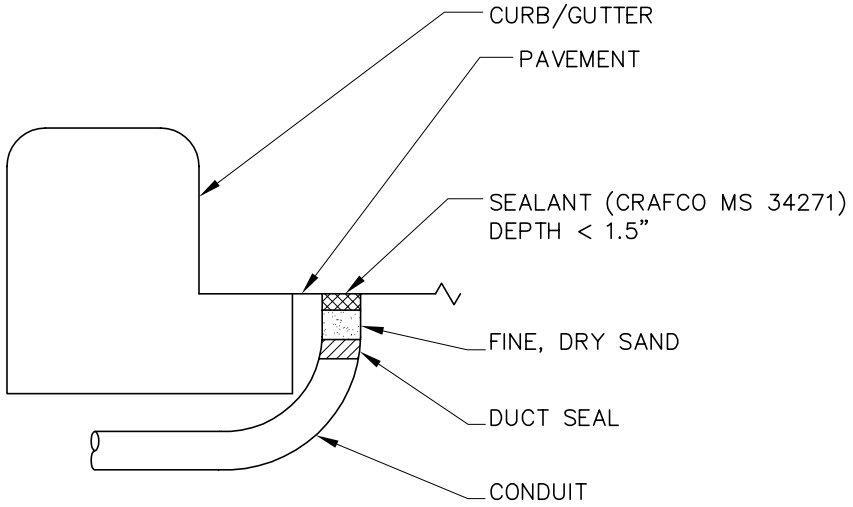

NOTE: HOLES > 3.5" REQUIRE AN ASPHALT PATCH

CONDUIT UNDER CURB

(NO SCALE)

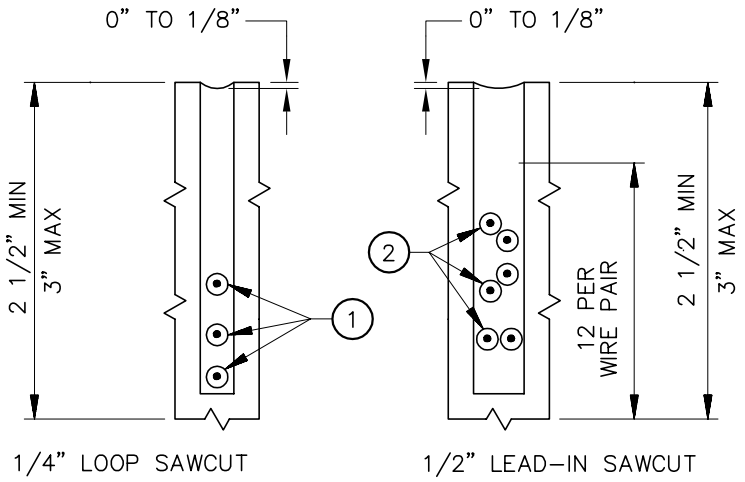

NOTES:

1. LOOP WIRE – NUMBER VARIES (SEE LOOP WINDING DETAILS)
2. LEAD-IN WIRES: ONE PAIR FOR EACH LOOP SERVED, THREE PAIRS MAXIMUM PER SAWCUT (SEE INSTALLATION)
3. EXTEND SAWCUT SUFFICIENT LENGTH TO PROVIDE FULL SAWCUT DEPTH AROUND CORNER

CROSS-SECTION OF SAWCUTS

(NO SCALE)

APPROVED: DON CAIRNS		THE CITY OF REDMOND WASHINGTON	STANDARD DETAILS
REV. DATE: OCTOBER 1, 2002			**SAWCUT AND CONDUIT UNDER CURB**
TRANSPORTATION DIVISION			FILE COND.DWG DRAWING NO. **456**